



PolyGuard UV™

- **Maintenance Instructions**

Regular maintenance is important to the overall performance of the roof coating.

- *Roof Inspection & Cleaning:*
Inspect the roof of the building and remove all loose material and debris at least twice a year. Clean the entire surface by sweeping and/or blowing off the roof. If heavily soiled areas exist, wash off surface with water.
- *Free Drains of Debris:*
It is imperative that the drains remain in proper working order. Regularly free all drains of any biodegrading materials.